



THIS DOCUMENT PROPRIETARY TO TITAN AIRCRAFT, AND IS NOT TO BE USED, CIRCULATED, REPRODUCED, COPIED, OR DISCLOSED IN ANY MANNER WITHOUT PRIOR WRITTEN PERMISSION OF AN AUTHORIZED OFFICIAL OF TITAN AIRCRAFT.

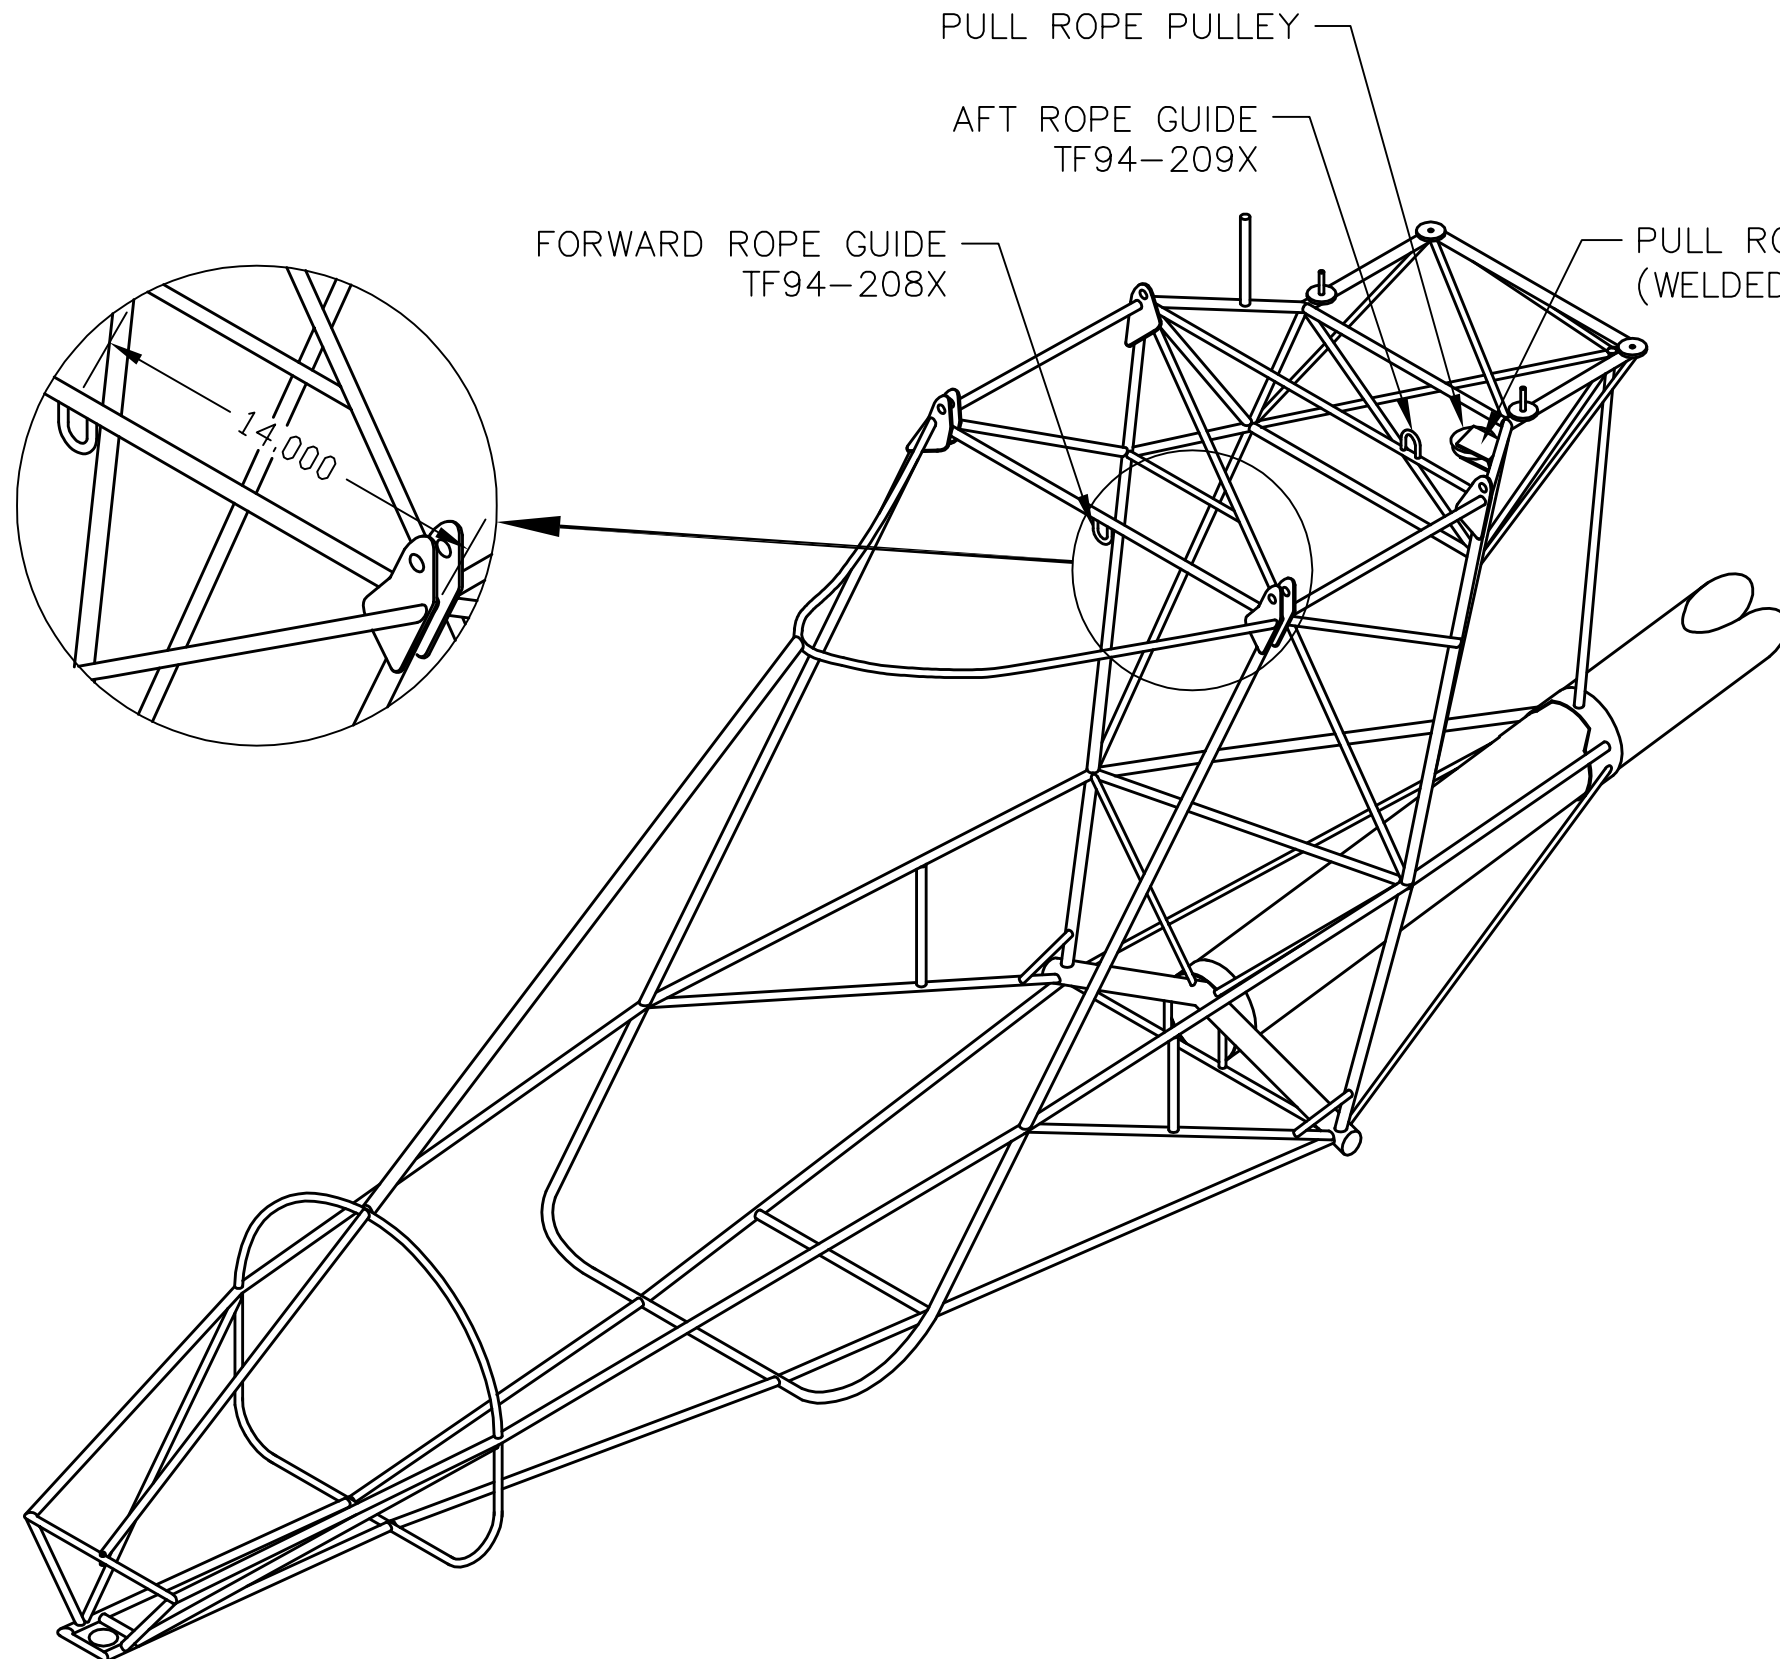

REVISIONS				
E.C. NO.	REV.	DESCRIPTION	BY	DATE
1040	B	STEEL ROPES GUIDES NOW USED	K.B.	11/96

**NOTES:**

- ALL DIMENSIONS ARE INCHES.
- MOUNT PULL START PULLEY TO BRACKET USING AN3-10 BOLT, AN365-1032 NUT AND AN960-10L WASHER.
- INSTALL PULL ROPE AFTER ENGINE IS PERMANENTLY INSTALLED.
- ROUTE PULL START ROPE THROUGH THE PULLEY, TO THE AFT ROPE GUIDE AND FINALLY THROUGH THE FORWARD ROPE GUIDE. PULL START HANDLE SHOULD SEAT FIRMLY IN THE FORWARD ROPE GUIDE.

		<b>TITAN AIRCRAFT SUPPLY</b> 1419 STATE ROUTE 45 SOUTH AUSTINBURG, OHIO 44010	
DETAIL NAME		PULL ROPE GUIDE INSTALLATION	
SCALE	N/A	PART NO.	
ASSEMBLY NAME			
PART NO.		DRAWING NO.	
DRAWING NO.		<b>B 93-INS-0343-B</b>	

DRAWN J. PRESTON	DATE 2/2/93
CHECKED B. PASSAFIUME	DATE 11/21/96
APPROVED J. WILLIAMS	DATE 11/26/96