


THIS DOCUMENT PROPRIETARY TO TITAN AIRCRAFT, AND IS NOT TO BE USED, CIRCULATED, REPRODUCED, COPIED, OR DISCLOSED IN ANY MANNER WITHOUT PRIOR WRITTEN PERMISSION OF AN AUTHORIZED OFFICIAL OF TITAN AIRCRAFT.

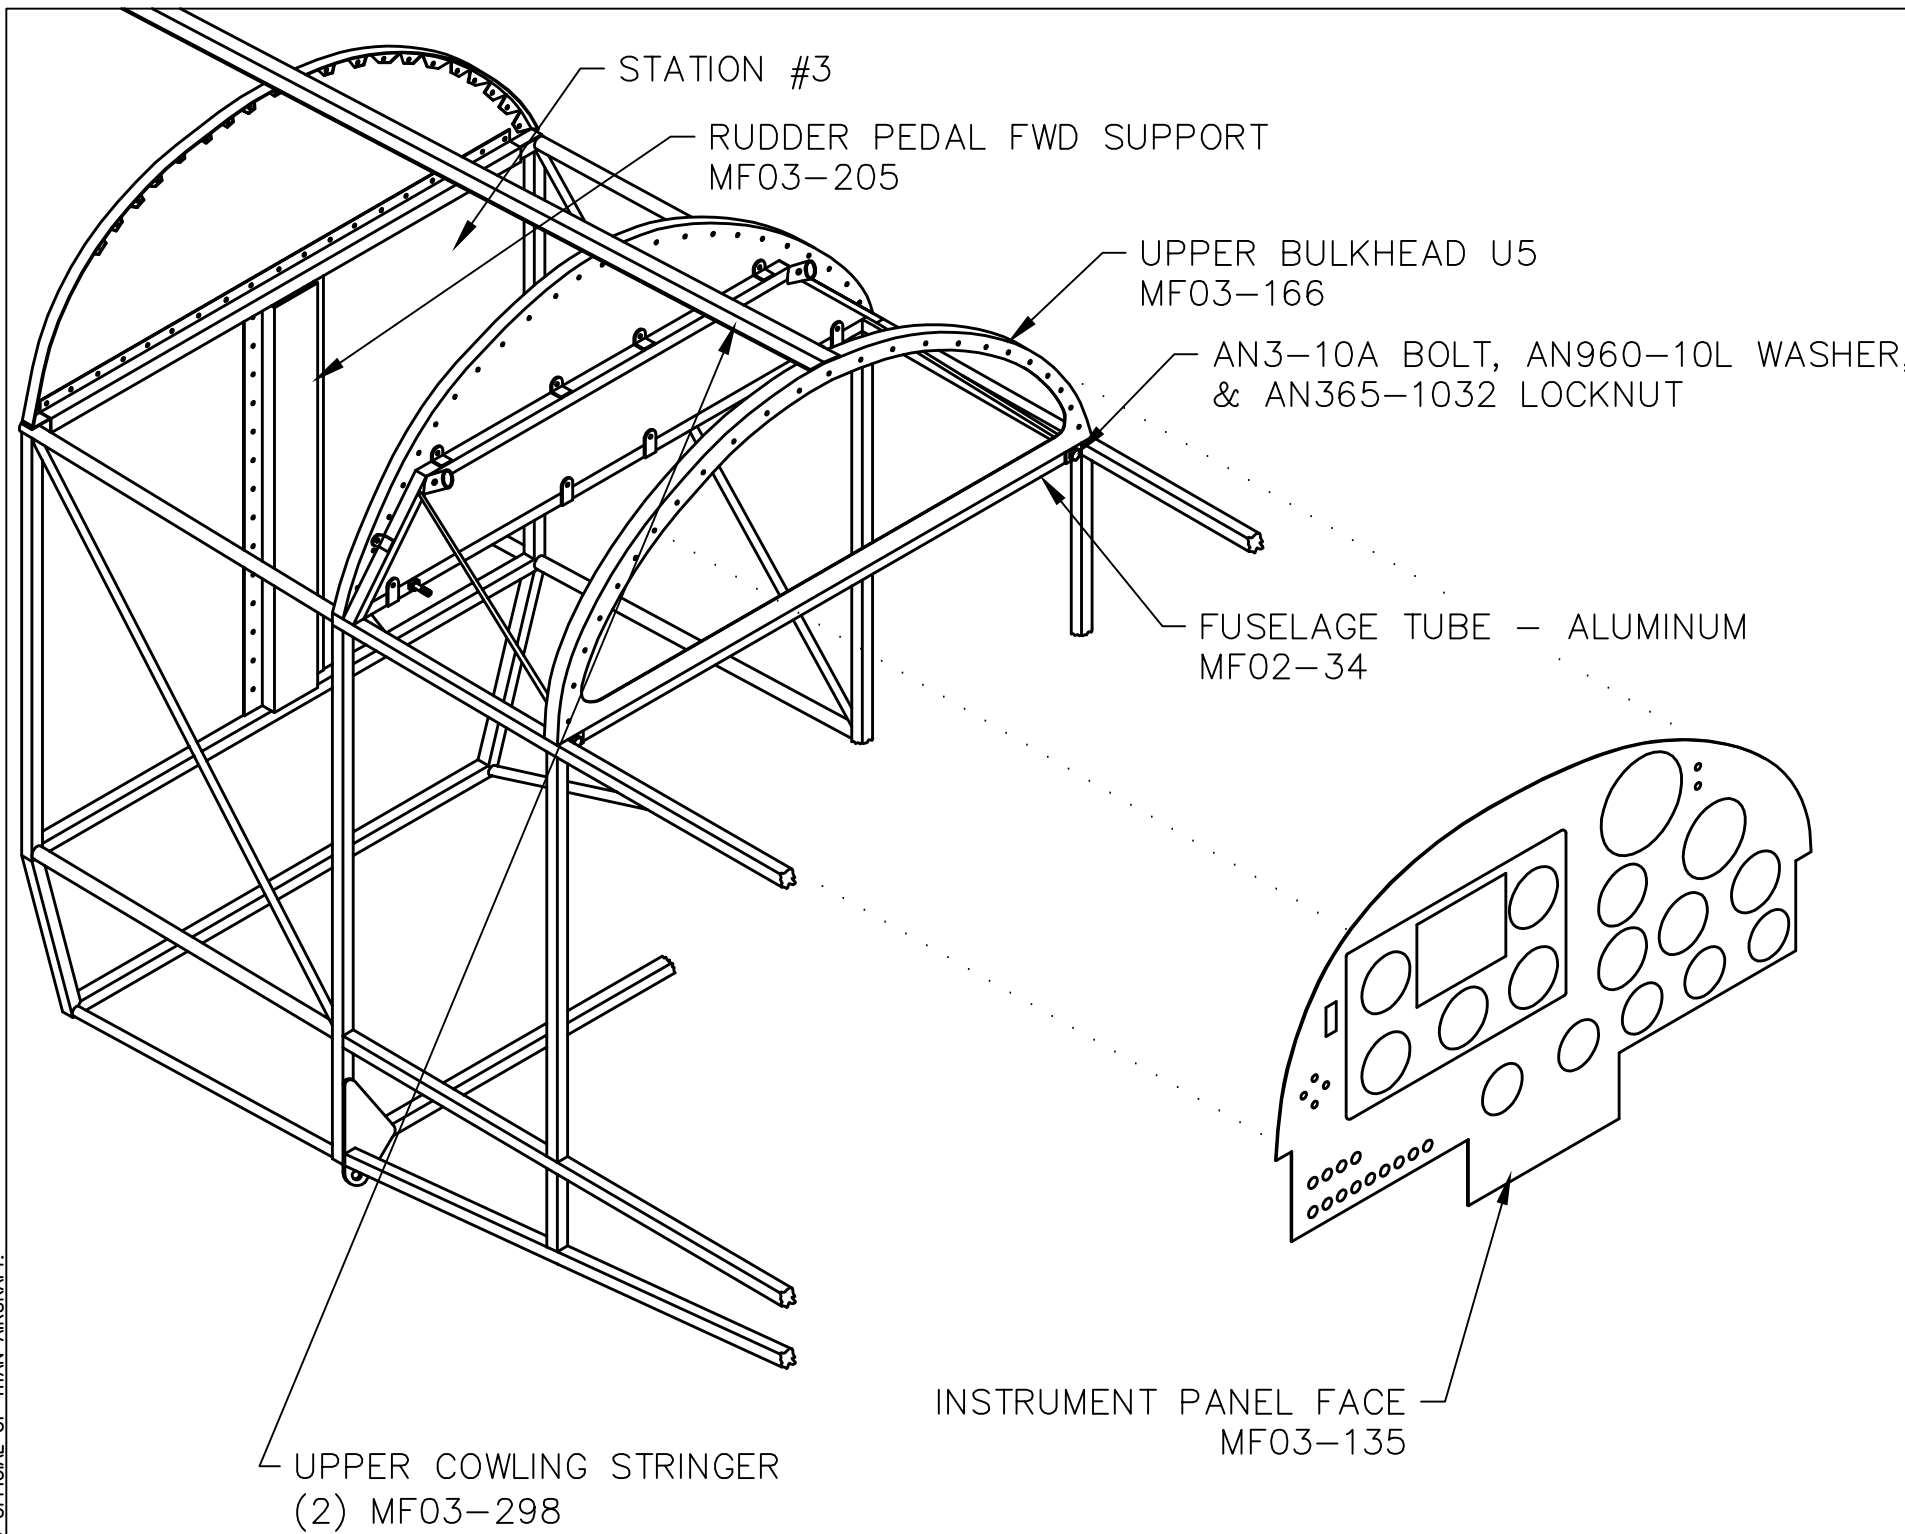

REVISIONS				
E.C. NO.	REV.	DESCRIPTION	BY	DATE
	A	DRAWING RELEASED	SH	3/07
0960	B	STRINGER ADDED	SH	6/09

**NOTES:**

- ATTACH THE REMOVABLE FUSELAGE TUBE (MF02-34) AT STATION #5 WITH (2) AN3-10A BOLTS, AN960-10L WASHERS, & AN365-1032 LOCKNUTS.
- BEFORE ATTACHING UPPER BULKHEAD #5 (MF03-166) REMOVE THE CENTER OF THE BULKHEAD APPROX. 1" FROM THE EDGE. (THIS WILL ALLOW CLEARANCE FOR INSTRUMENTS ONCE THE INSTRUMENT PANEL FACE (MF03-135) IS INSTALLED.)
- AFTER THE CENTER OF MF03-166 IS REMOVED, ATTACH BULKHEAD #5 TO THE REMOVABLE FUSELAGE TUBE (MF02-34) WITH SD43BS RIVETS BY RIVETING THE BOTTOM FLANGE OF MF03-166 TO THE TOP OF MF02-34. (ATTACHING THE BOTTOM OF U5 TO THE REMOVABLE FUSELAGE TUBE (MF02-34) IS OPTIONAL.)
- "D" TOP SKIN (MF03-186) WILL ALSO BE ATTACHED AT BULKHEAD #5. (SEE DRAWING T51-05-INS-1319)
- THE INSTRUMENT PANEL FACE (MF03-135) WILL ATTACH TO THE PERIMETER OF UPPER BULKHEAD #5. WELL-NUTS CAN BE USED FOR SHOCK MOUNTS WHEN ATTACHING MF03-135 TO BULKHEAD #5 AND CAN BE FOUND AT YOUR LOCAL HARDWARE STORE.

**TITAN AIRCRAFT SUPPLY**  
 1419 STATE ROUTE 45 SOUTH  
 AUSTINBURG, OHIO 44010

DETAIL NAMESTATION #5/INSTRUMENT PANEL INSTALLATION

DRAWN S. HENDERSON	DATE 3/27/07	SCALE 1/8"=1"	PART NO.
CHECKED R. INGLE	DATE 6/26/09	ASSEMBLY NAME	
APPROVED K. BROOKS	DATE 8/7/09	PART NO.	DRAWING NO. F4
		DRAWING NO. <b>B T51-07-INS-1606-B</b>	